

USING THE UTILITY PROGRAMS

July, 1984

Copyright (C) 1984 New England Digital Corporation

PREFACE

This manual contains instructions for using the Utility Programs and the Winchester Installation Program. You will learn how to

- format your tape cartridge or floppy diskettes using the FORMCOPY program;
- copy system and user files using the FORMCOPY program;
- copy system files onto your Winchester using the WINCHESTER INSTALLATION Program;
- reorganize your subcatalogs and files using the SHUFFLE program;
- reconfigure your operating system using the CONFIGUR program;
- print out permanent copies of your XPL programs using the LISTING program.

Introduction	5
Device Identifiers	6
Running the Utility Programs	6
Formcopy	8
The Menu	8
Mode Options	9
Source and Destination Devices	10
Copying Parameters	11
Formatting Parameters	12
Formcopy Procedure	12
Shuffle	13
The Menu	13
Shuffle procedure	14
Configur	15
Basic level of CONFIGUR	16
Comprehensive Level of CONFIGUR	17
Listing	19
The Menu	19
Changing Parameters	19
Special Text Key Words	21
The Winchester Installation Diskette	22

INTRODUCTION

On the floppy diskette labeled "Utility Programs" there are four Utility Programs: FORMCOPY, CONFIGUR, SHUFFLE and LISTING. Users with Winchester Disk systems will also receive a floppy diskette labeled "Winchester Installation Program."

FORMCOPY

FORMCOPY formats floppy diskettes or tape cartridges and copies files from any storage device in the system to any other. All files on a diskette, all files in a subcatalog, or individual files can be copied.

SHUFFLE

SHUFFLE reorganizes the contents of a storage device to make room for more files. Spaces between files and/or subcatalogs are moved to the end of the storage device. Any storage device, except the Tape Cartridge, can be shuffled. The current catalog can also be shuffled.

CONFIGUR

CONFIGUR tells the operating system about the physical setup of the computer installation. Memory size, terminal and printer type, processor type, storage device type, real-time clock speed and the presence or absence of musical interfaces are recorded within the operating system by the CONFIGUR program. You can configure the Winchester Disk and any system diskettes located in any attached drive.

LISTING

LISTING prints out permanent listings of XPL programs from any storage device except the Tape Drive. You can also print out subcatalog files. LISTING supports several printers.

WINCHESTER INSTALLATION

WINCHESTER INSTALLATION formats Winchester Disks and copies system files into the top-level catalog of a Winchester. It is used primarily to install software updates.

Device Identifiers

All the Utility Programs have quick access to any storage device in the system except the Tape Drive (which can only be accessed by FORMCOPY). When you run a Utility Program, you can specify the device or devices involved using these identifiers:

F0	Floppy diskette in drive-0 (main or left-hand drive)
F1	Floppy diskette in drive-1 (auxiliary or right-hand drive)
R0	Minidiskette in remote drive-0
R1	Minidiskette in remote drive-1
W0	Winchester Disk subsystem
T0	Tape Drive subsystem
CC	Current catalog

You will note that these are the same as the device identifiers used in Monitor commands with the addition of T0 (accessed only with FORMCOPY) and CC (accessed by all Utility Programs).

Running the Utility Programs

The Utility Programs come on a special Utility Programs diskette. From a Winchester system, remove the Bootload diskette from the main or left-hand diskette drive and replace it with the Utility diskette. From a floppy diskette dual drive system, keep an XPL system diskette in the left-hand drive and place the Utility Programs diskette into the right-hand drive. (NOTE: You cannot run any Utility Program from a SCRIPT system diskette.)

To use a program in the dual drive system, type

```
OLD <utility filename>; RUN
```

To use a program in the Winchester system, type

```
OLD <utility filename>/F0; RUN
```

There is room on certain system floppy diskettes (i.e., maxidiskettes and double density minidiskettes) for storage of at least some of the Utility Programs. To store a Utility Program onto a system floppy, type

```
OLD <utility filename>; SAVE/F0
```

Then to use the program stored on the system diskette, type

```
OLD <utility filename>/F0; RUN
```

Similarly, any or all Utility Programs can be stored on the Winchester Disk. To do so, type

```
OLD <utility filename>/F0; SAVE
```

Then to run it, type

```
OLD <utility filename>; RUN
```

To perform any Utility Program on the files in a subcatalog, first recall the Utility Program, next enter the desired subcatalog, and then run the program, as follows:

```
OLD <utility filename>
```

```
ENTER <subcatalog name>; RUN
```

The subcatalog entered will be the current catalog while the Utility Program will be the current file.

The commands can be entered on one line, as follows:

```
OLD :<utility filename>; RUN
```

Here the Utility Program becomes the current file while the current catalog remains the same.

Once the command RUN has been entered, instructions for operating the Utility Program will appear on the terminal screen. Each program offers options, although you will often use the default options.

FORMCOPY

CAUTION: Carelessly used, FORMCOPY can obliterate valued information very quickly. Please read the following instructions very carefully before using.

The FORMCOPY program has two separate functions: formatting and copying.

Formatting prepares the magnetic media on a floppy diskette, Winchester Disk or Tape Cartridge for storage of data. When you use FORMCOPY for formatting, you will specify whether the device will be used for XPL or CP/M. (All Synclavier diskettes are formatted for XPL). In the case of minidiskettes, you will further specify whether the diskette will be used in a single or double drive. Note that if you format an old diskette or tape cartridge, you will erase any previously stored information.

CAUTION: Do NOT use FORMCOPY to format your Winchester Disk. Winchester formatting is done here at N. E. D. Any future formatting should be done using the Winchester Installation Program.

In addition to formatting, FORMCOPY copies files and subcatalogs to and from any storage device in the system. You can copy from left-to right-hand drive, from Winchester to floppy, from main drive to remote, from tape cartridge to current catalog, etc. You can copy a single file, a series of selected files, an entire subcatalog or an entire floppy from one device to another. You can also copy any of the above into a subcatalog.

The Main Menu

When FORMCOPY is run, the terminal screen displays a menu listing options and commands. Across the top of the screen is a set of basic instructions for using FORMCOPY. To the left is a list of the valid commands and to the right side of the screen is the list of options.

First, note that the default mode is Copy. This is because you will mostly use FORMCOPY for copying files and making back-up diskettes.

The list of commands on the left side of the screen varies depending on the mode. For copying, the list of commands is:

- S View source catalog
- D View destination catalog
- I Interchange source and destination
- Q Quit (return to operating system)

RETURN Initiates copy

When you press the terminal key corresponding to these commands, the operation described next to the key name will be performed. For example, pressing the S key will bring up the source catalog or catalog from which files are to be copied. Pressing the D key will bring up the destination catalog or catalog to which files are to be copied.

When you press RETURN, you will always be asked to verify your selections by typing "OK" and pressing RETURN again. This is to prevent a premature program initiation.

At any time while this menu is on the screen, you can return to the Monitor by typing Q (for Quit) or by pressing the BREAK key.

Listed on the right side of the screen are options with default choices. For dual drive systems, the default choices are

Mode:	Copy
Source:	F1 (Rightmost floppy)
Destination:	F0 (Leftmost floppy)
Select:	No
Alphabetic:	No
Erase:	No
Density:	
Disk format:	

For Winchester systems, the default choices are the same except for Source, which is W0 (or CC if you are in a subcatalog).

You change the default options by first moving the cursor to the option to be changed and then pressing the space bar until the desired option appears.

Mode Options

The MODE option specifies the mode of operation. If you choose the default option, COPY, files on the source device will be copied onto the destination device when you press the RETURN key.

FORMAT AND COPY, which appears if you press the space bar when the cursor is on the MODE option, will cause the destination device to be formatted before the source files are copied to the destination device.

Pressing the space bar again will bring up the FORMAT mode which means that the destination device will be formatted only.

Pressing the space bar one more time will return COPY to the mode option.

Notice that when you change the MODE option, the commands on the left side of the screen change also. That is, if you select FORMAT as your mode of operation, the list of valid commands will include only

D

Q

RETURN

since the S and I commands are irrelevant in this mode.

Changing this option also changes some of the other options. For example, when you select the FORMAT only option, the SOURCE option in the second set of options will not appear nor will the third set of options which define COPY parameters. On the other hand, the last set of options defining FORMAT parameters will not appear when you select the COPY only mode.

Source and Destination Devices

The next two options specify the SOURCE and DESTINATION devices. You can choose a SOURCE device only when you are using the copy or format and copy modes of operation. You select a DESTINATION device for all operations. For dual drive systems, the default SOURCE selection is F1 (auxiliary or right-hand floppy); for Winchester it is WO if you are in the top-level catalog, or CC in you are in a subcatalog. The default DESTINATION for both systems is FO (main or left-hand floppy).

Winchester users with Tape Cartridge Subsystem will change the DESTINATION option to TO to copy files for archival purposes. To recall files from the Tape Cartridge, change the SOURCE mode to TO and the DESTINATION to CC or WO. (This can only be done if the system has been configured for a Tape Cartridge.

Notice that the Command Key I listed on the left side of the screen can be used for an interchange of SOURCE and DESTINATION devices.

Copying Parameters

The SELECT option allows you to select specific files to be copied. If you choose YES and press RETURN, type OK, and press RETURN again, a new menu will appear on the screen. For example, if you are copying from F1 to F0, you will see at the top of the menu

Copy from: F1 (Rightmost floppy)
Copying to: F0 (Leftmost floppy)

SELECT option: Use the cursor to move over the file. Press the space bar to select or deselect a file to copy. Press RETURN to initiate the copy. Press Q to abort the copy operation. Selected files are marked with a >.

Below this, the source catalog directory will be displayed on the screen with a vertical line (|) in front of each filename. If you don't want a file copied, skip over the filename by pressing the right arrow key. If you do want a file copied, press the spacebar. The | in front of the file will change to a > as you mark it. If you change your mind, go backward using the left arrow key, press the spacebar again and the file will be unmarked. In fact, you can move around the directory in any way using the arrow keys and the PF1 or HOME keys.

If the selected file is already stored on the destination device, you will be so informed during the copy operation. You will then have the option of replacing the destination version of the file with the source version or keeping the original destination version.

If you select YES for the ALPHABETIC option, the files will be copied in alphabetical order. If you leave the option at NO, they will be copied in the same order as they occur on the source device.

If you change the third option, ERASE, from NO to YES, then the entire destination catalog will be erased before any copy operation commences. This means that any files stored on the destination device will be destroyed.

CAUTION: If you are copying files into the top-level catalog on the Winchester, the ERASE option should be set to NO. Otherwise you will erase the top-level catalog and you will be unable to run your system.

A special safety prompt is built into this option. When you press the spacebar to select YES, you will be asked whether you really want to erase the destination files. Type Y for yes or N for No. The OK prompt that appears when you press RETURN to initiate the copying operation gives you a second chance to review this option.

Formatting Parameters

The last group of options specifies formatting parameters. The DENSITY option, SINGLE or DOUBLE, must be set to the density of the floppy minidiskette being formatted. For maxidiskette drives, the parameter will be ignored.

The DISK FORMAT option allows you to choose between formatting for XPL or for CP/M. You will always choose XPL except when creating diskettes for use with the CP/M option.

Formcopy Procedure

Once you initiate the selected operation, the screen will clear and information concerning the procedure will appear.

For example, if you have selected the formatting mode, FORMCOPY will tell you as it begins the formatting pass, then the test pass, and when formatting is complete. If the diskette being formatting is defective, FORMCOPY will print details about the exact address of the defect and warn you not to use the diskette.

If you are copying, and a file or subcatalog will not fit on the destination device, FORMCOPY will give you the option of continuing with a new tape or diskette or quitting the operation. If you elect to continue copying with a new diskette or tape, press RETURN. The mode, erase and density options will appear in the upper right-hand corner of the Copy Menu.

For example, if you were copying files from CC to TO, you would see

Copying to: TO	Copying file: <filename>
Copying from: CC <catalog name>	Mode:
	Erase:
	Density:
<hr/>	
Files copied:	
<filename> <filename> <filename>	

Insert the next disk/tape into FO (Leftmost floppy). Then verify selected modes. Change modes with space bar. Press RETURN to continue or Q to quit.

You would need to change the mode and density options, for example, if you had been using the copy only mode to copy onto a formatted diskette, but needed to continue copying onto an unformatted diskette.

SHUFFLE

When you store files, empty sectors often occur between files. You may get an error message saying there is no more room on the floppy diskette or Winchester Disk or within a subcatalog, when in fact there are more than enough empty sectors scattered throughout the device. The SHUFFLE program is used to pack files and subcatalogs together and to collect the empty sectors into a group at the end of the floppy diskette, Winchester Disk or subcatalog.

The files on any storage device connected to the computer, except the Tape Drive, can be shuffled. You can also rearrange the files so that specified files are collected into adjacent areas.

The Menu

When you run the SHUFFLE program, a menu with a list of options will appear on the screen. Users with dual diskette drives will see

GO	to SHUFFLE F1 (Rightmost floppy)
DEV	to change Device selection
COL	to enter a list of filenames to be COLLECTED
CAT	to CATALOG F1 (Rightmost floppy)
<RETURN>	to terminate SHUFFLE PROGRAM

Winchester users will see the same menu, except that the default for GO and CAT is WO or CC, depending upon whether the you are in the top-level catalog or a subcatalog.

If you type GO at this point, the SHUFFLE program will begin to rearrange all the files on the default device. If you want to change the default device or select specific files to be shuffled, you will need to choose options first.

Type DEV to change the storage device that you want shuffled. When you press RETURN, a list of the possible storage devices (as outlined on page 6) will appear: Type the selected device, press RETURN and the main menu will reappear.

If you want to make a specific arrangement of files, that is, place certain files next to certain other files, type COL for the Collect Option. The menu will be replaced with instructions for building a list of files to be rearranged. Type in the filenames as you want them to be arranged and press RETURN. The menu will reappear. If you are not sure of the filenames in the catalog or subcatalog to be shuffled, type CAT and the directory will appear on the terminal screen.

NOTE: The length of time needed for the shuffle will approximately double with this option.

Shuffle procedure

After the options are selected, type GO to initiate the shuffle. As the shuffle proceeds, each file being shuffled will be listed on the terminal screen. Note that it may take between 15 to 20 minutes to complete a shuffle on the Winchester Winchester Disk.

CAUTION: Never to try to stop a shuffle. The keyboard is automatically disabled during a shuffle, but pressing the LOAD button or turning off the power could result in lost data.
--

After the SHUFFLE is completed, press RETURN to terminate the SHUFFLE program and return to the Monitor.

CONFIGUR

All operating systems must be customized for the particular set of hardware in the Synclavier (R) Digital Music System. This customizing is called configuring the system and is initially performed here at New England Digital with the CONFIGUR program. You also have a copy of this program so that you can reconfigure your system diskette or Winchester Disk whenever you change or expand your options.

For example, if you decide to add a printer or change the type of terminal you are using or add memory to the computer, you will use the CONFIGUR program to tell the operating system about these changes.

The CONFIGUR program is divided into two levels: basic and comprehensive. The basic level allows you to configure a system diskette placed in the main or left-hand drive for the amount of memory in the computer and the type of terminal and printer, if any, attached to it. The comprehensive level allows you to configure the Winchester Disk or a system diskette placed in any device in the system. In addition to the basic items, you can configure for several computer options and whether or not you have a musical interface.

<p>WARNING: Certain wrong responses in the configuration process can make a system diskette incapable of loading the computer. Please read the following carefully and use care when running the CONFIGUR program.</p>
--

To run the basic level of the CONFIGUR program, recall the program in the usual way, insert the system diskette to be configured into the main or left-hand drive and press RETURN. Do not remove this diskette until so directed.

Basic level of CONFIGUR

After you press RETURN, the current configuration of the system diskette in the left-hand drive in terms of memory size, terminal type and printer type will be printed on the terminal screen.

When you change these parameters, keep the this information in mind:

1. MEMORY There are 8K words of memory for each MBK board and 32K words for each M32K board installed in slots 1 through 7 in the computer. Make sure the memory configuration matches the memory that you actually have. NOTE: If you have two 32K boards, you must specify 60K or less, not 64K. The system does not recognize 64K.

CAUTION: If you specify <u>more</u> memory than you actually have, you will not be able to load the system.

2. TERMINAL The terminal type must be the same as the terminal actually attached to the TERMINAL port or garbage will appear on the screen and the Screen Editor will not function correctly.

3. PRINTER Make sure the printer type is the same as the device actually attached to the PRINTER/MODEM port.

To change any parameter, type the number of the option to be changed and answer the questions that come up on the screen. If you type 1, for example, you will be reminded of memory size currently specified and asked how much memory you want to reconfigure for. Type the number 40 to configure for 40K words or the number 56 to configure for 56K. Press RETURN to return to the main menu.

If you type 2 for terminal or 3 for printer, you will again be reminded of current configuration. There will also be a list of valid terminals or printers and you will be asked to type in the number associated with your new terminal or printer.

If you make an error in any of these three configurations, type R while at the main menu to recover your original configuration.

If you type L while at the main menu, you will be asked whether you want to be in COMPREHENSIVE level. Type Y for Yes or N for No.

Press RETURN when you have finished and then type STOP to return to the Monitor.

Comprehensive Level of CONFIGUR

You can use the comprehensive configuration level by typing GO and pressing RETURN on the first menu or by typing L followed by Y on the Basic Level. You must be in the comprehensive level to reconfigure the Winchester operating system and/or a system diskette in F1 or a remote drive.

After you type GO and press RETURN, CONFIGUR will ask you to enter the location of the system you wish to configure. Type FO, F1, RO, R1, WO or press RETURN to configure the operating system in the default device (FO for a dual diskette drive; WO for a Winchester).

After you have made your selection and pressed RETURN, you will see the current configuration of your system on the terminal screen. In addition to MEMORY size, TERMINAL and PRINTER type, you will see

4. PROCESSOR type
5. Computer Options:
 - Multiply/Divide unit
 - DMA controller
 - Real Time Clock speed
 - Remote Minidiskette interface
 - Tape Drive Subsystem
6. Music related interfaces
 - D130 Clavier interface
 - D160 Synthesizer interface
7. System storage device

You should keep this information in mind when you change these parameters:

- | | |
|---------------------|---|
| 4. PROCESSOR | This parameter is set at the factory; it is unlikely that you will have to change it. |
| 5. Computer Options | These are basically yes or no options that will need to be changed if you upgrade your system. The real-time clock speed may now be configured. This is handy if you're setting up timing loops that deal with screen/user interaction. Normal speed for Synclavier (R) systems it is 200 Hz. |
| 6. Music Interfaces | These are yes or no options indicating presence or absence of interface boards. If you type Y for the D130 Clavier interface, you will be further asked whether your keyboard senses velocity and pressure. |

7. Storage This option specifies which system storage devices
Device Type are attached to the system. If you are adding one
or more Winchester Disk drives, you will have to
specify the number and size of the each. For a
changed diskette drive, you will have to specify
whether it is single or double density.

CAUTION: If you specify the wrong storage device type,
you will not be able to load the system.

Again, to change any configuration, type the number associated with
that option and then answer the questions that appear.

As in the basic level, if you make an error you can correct it by
typing R to recover your original configuration.

When you have finished changing the parameters of your system, press
RETURN and the specified device will be reconfigured according to
your new specifications. After reconfiguration is complete, type
STOP to return to the Monitor.

LISTING

To print out listings of XPL source files from any attached storage device, RUN the LISTING program.

The Menu

When you run LISTING, the LISTING menu will appear on the terminal screen. At the top of the menu you will see a list of three command keys:

Q	Quit
RETURN	Initiate Listing
BREAK	Return to Monitor

You can use either the Q or BREAK keys to return to the Monitor from the menu. Additionally, the BREAK key can be used to return to the Monitor even after the RETURN key has initiated the listing.

Below the command keys is a list of ten options, each with a corresponding number and a default value.

0	Current Storage Device
1	Enter "1" to see source CATALOG
2	Printer type
3	All Files will be printed
4	Title for listing
5	Index page WILL NOT be printed
6	Number of copies
7	Page length (lines per page)
8	Page Width
9	Comments start at column

Changing Parameters

0. Pressing 0 allows you to change the storage device from which the source file is to be printed. A new menu will remind you of the current storage device and list the valid choices of other devices. Type in the new device identifier or press RETURN for no change.
1. Pressing 1 brings up the catalog of the specified storage device listed on the terminal screen. Press RETURN to continue.

2. Press 2 to change the type of printer. The default, based on the printer specified in your system configuration, can be overridden by typing one of the following printer types:

Decwriter
La-34
Printronic
Paper Tiger
Diablo

Another option is TER for terminal, if you want the files printed on the terminal.

Press RETURN when you have set this option.

3. The default setting is that all files of the specified storage device will be printed in the order they occur on the storage device. Type 3 to build a list of the specific files you want printed in the order you want them printed. If you press 3 again and the setting will return to the original all-files-printed option.

NOTE: This option "toggles" between the two choices. Therefore, do not press RETURN after setting it or you will initiate the LISTING print-out.

4. Type 4 to type in the title for the print-out. The title will be printed on the top of each page of the listing. Any text, up to the limit printed on the screen, can be used.
5. The default setting specifies that no index of the files will be printed. Type 5 to have an index page printed. When the program runs, it will read through all the files being printed and print out the page number where each file begins and the length in words of each file. The index will also include each PROCEDURE, INSERT, WHEN, LIBRARY and MODULE statement along with its line and page numbers.

NOTE: This, too, is a "toggle" option; do not press RETURN after making your selection or you will initiate the LISTING.

6. Type 6 to specify the number of copies you want printed. Type in any number up to 32,000 and press RETURN.
7. Type 7 to change the page length. Then type in the new length and press RETURN. The new number must, of course, fit into the physical limitations of the paper or printer you are using.
8. Type 8 to change the page width. Then type in the new page width and press RETURN. Again, you must remain within the physical limitations of the paper or printer you are using.
9. You can locate the beginning of your comments in any column. The default column number is 60. To change this, type 9, type in the new column number and press RETURN.

When you have selected your options and set your parameters, press RETURN to start the LISTING.

Special Text Key Words

The name of the file being listed is printed on the top line of each page of the listing along with the page number. If you use the symbol \$TITLE in a comment, such as

```
/*$TITLE Inventory Program*/
```

the words following the symbol will be printed in the center of the second line on each page of the file listing. Similarly, by using the symbol \$SUBTITLE in a comment, you can give a heading to a section in your file. Both \$TITLE and \$SUBTITLE symbols cause the listing output to start a new page and appear in the index. A new page will also be started if \$PAGE occurs in a comment.

A listing has automatic formatting by default. To turn off the automatic formatting, include \$NOFORMAT in a comment; to turn it back on, include \$FORMAT in a comment.

THE WINCHESTER INSTALLATION DISKETTE

The Winchester Installation diskette contains a short program used to format the Winchester Disk and to install system files onto it. The diskette is used here at New England Digital to prepare the Winchester Disk for operation. You will use your copy to install software updates onto your Winchester Disk and/or to replace accidental erasures.

WARNING: The Installation diskette has the capability of wiping out all the information stored on your Winchester Disk. Do NOT attempt to use it without having read this section carefully.

When you run the Installation program, you will be asked whether or not you want to format. Formatting, as explained in the FORMCOPY section, erases all information stored on the Winchester Disk. In general, you should only format your Winchester after a serious Disk failure, such as a bad track or a catalog failure. For most situations, you will skip formatting the Disk and re-install the files which need to be updated. Of course, if you want to erase everything and start from scratch, you should format the Disk. To do this without losing information, first save all user files on floppy diskettes or on a tape cartridge before using the Installation diskette.

When you run the Installation diskette, special prompts will step you through an orderly installation of new system files. Each prompt will tell you which diskette to insert into the main drive. Prompt 1, for example, calls for installation of the most commonly used files. The last prompt on the menu is used to install any arbitrary diskette you want to install in addition to the software updates.

At the end of the installation process, select item 0 on the menu. The program will then verify consistency of the system files, print a message, and stop. You may then use the Winchester Bootload diskette to load the Monitor and begin operation.